

H462502 LIZZIE FLUSH MOUNT

ASSEMBLY AND MOUNTING INSTRUCTIONS

GENERAL

- WARNING-DISCONNECT POWER BEFORE RELAMPING OR WIRING THE FIXTURE. TURN OFF THE ENTIRE ELECTRICAL CIRCUIT TO WHICH THE LIGHTING FIXTURE IS ATTACHED
- INSTALLATION AND MAINTENANCE OF THIS FIXTURE SHOULD BE COMPLETED BY A LICENSED ELECTRICAN
- FAILURE TO INSTALL FIXTURE CORRECTLY COULD RESULT IN SERIOUS INJURY OR DEATH
- READ ALL INSTRUCTIONS BEFORE STARTING INSTALLATION.

- IF AN EXISTING FIXTURE IS BEING REPLACED, REMOVE IT AND NOTE TO WHICH WIRE IN THE OUTLET BOX THE ORIGINAL FIXTURE WAS ATTACHED.
- BEFORE DISCARDING THE CARTON DOUBLE CHECK THE PACKAGING TO MAKE SURE ALL PARTS HAVE BEEN FOUND.
- THIS FIXTURE WAS DESIGNED TO BE MOUNTED TO AN OCTAGON OUTLET BOX. THE BOX MUST BE SECURELY MOUNTED TO THE STRUCTURE OF THE BUILDING.

INSTALLATION

STEP 1.	Pull the wires out from the outlet box and install mounting plate onto the outlet box by using the (2) mounting screws.		CORRECTLY COULD RESULT IN SEROIUS INJURY OR DEATH!
STEP 2.	Fasten bare ground wire to ground wire from the wall outlet	STEP 5.	Carefully place connections back into the outlet box
	box (usually green or copper color) or connect ground wire to green screw on the mounting plate.	STEP 6.	Lift the canopy up over the mounting plate and secure with ball nuts.
STEP 3.	Connect the neutral (white) fixture wire coming from the fixture base to neutral (usually white) outlet wire. Fasten	STEP 7.	Install the lamp(s). The fixture is rated for LED 7-watt type B lamp or 60-watt type A15 lamp.
	both wires together with a plastic wire nut and tightly wrap		DO NOT EXCEED RECOMMENDED WATTAGE!
	the wire nut with electrical tape.	STEP 8.	Attach the glass shade onto canopy, secured it with the
STEP 4.	Repeat the previous step with the hot (black wires). Make		plastic ring, metal plate and end cap.

STEP 9.

cause a dangerous short circuit. FAILURE TO CONNECT THE APPROPRIATE WIRES

sure there are no exposed wires or strands that could

DIMMING

The fixture can be controlled by a wall dimming device. Only use triac/electronic dimmer. Make sure carton is marked for use with LED compact fluorescent-incandescent light source only. These can be

provided by your local electrical distributor, home center, or hardware store.

Restore power to the circuit at breaker or fuse-box.


CLEANING

Please clean with a soft, dry cloth ONLY! Do not use cleaning products.



H462502 LIZZIE FLUSH MOUNT

ASSEMBLYANDMOUNTINGDIAGRAM

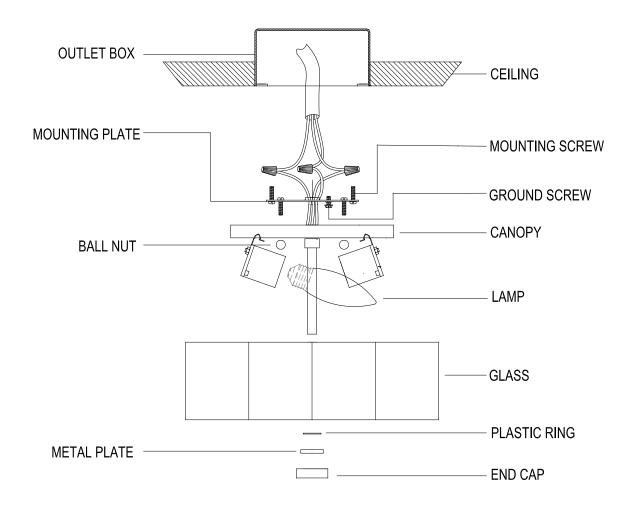

WIRE NUT/TAPINGDIAGRAM

