

PARTS & ASSEMBLY SHEET

Fixture Name: Torbellino 8106-3P CDB

This fixture assembled PO:_____ Date: ____

Notice: Please review the parts listing and check for all parts before assembling the fixture. If any parts are missing or damaged, please note on this sheet and contact the place of purchase to arrange for replacement parts.


PARTS LIST		Company Name: to be filled out by reto		Co. Account #:	
Canopy		Mounting Screws		Top loop	
1ea Φ153*32Hmm		2ea 8/32T*1-1/4"L		1ea Ф62*68Hmm	
Chain		Wire connectors		Bottom cap	
1ea 6ft*4.2mm		2ea Orange	·	1ea Ф70*11Hmm	
Chain connector		Canopy loop and Canopy loop collar		Nipple	
2ea 23.8*59mm		1ea Φ25*45Hmm		2ea Ф12*55mm	
Mounting Strap		Hex Nut		Finial	
Tea Toomin Zomin		Zed \$711111 4111111		160 430 331111111	
Part Needed				Quantity	
Part Needed				Quantity	
Reason why Comments	(missing, scratche	d, broken glass, bei	nt, bad finish)	-	

FIXTURE ASSEMBLY INSTRUCTIONS

Read and review installation instruction sheet before assembling the fixture.

- 1. Thread the Body (L) onto the Coupling (M) and until tight.
- 2. Then screw the Top Loop (J) to the threaded Nipple (K) at top of Frame until tight.

NOTE: INSTALL THE GLASS ASSEMBLY AFTER THE FIXTURE IS HUNG.

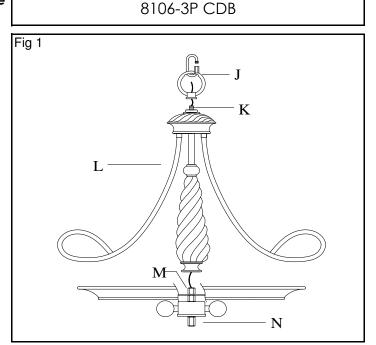

For Customer Service, contact the place of purchase to arrange for replacement parts.

PARTS & ASSEMBLY SHEET

Fixture Name:


Torbellino 8106-3P CDB


- 3. By measuring determine correct number of links needed for proper hanging height. Use a pair of pliers to open one link of the Chain (C2) then remove the excess Chain (C2) and discard it.
- 4. Use one chain connector(E2) to attach one end of the chain to the Top loop (D2) and close the chain connector.
- 5. Feed the fixture wires through the Chain (every three links) and pull the wires until taut.
- 6. Slip Canopy loop collar (B2) over the chain, then do the same with the canopy (F2).
- 7. When ready to complete the installation Use the other chain connector and attach the other end of the chain to the canopy loop (A2) and close the chain connector.
- 8. Make sure the weight of the chandelier is supported by the chain-not the electrical wire. You may now install the fixture.

NOTE: Complete these remaining steps after the fixture is hung.

- 9. Thread the Nipple (P) into the Coupling (N), and then thread the Hex Nut (Q) onto Nipple (P) until tight.
- 10. Install the light bulbs in accordance with the fixture's specifications.
- 11. Place Glass Shade (R) over the Metal Ring.
 The Nipple (P) shall protrude through the bottom hole of the Glass Shade (R).
- 12. While holding the Glass Shade slide the
- 13. Slide Bottom Cap (U) over Nipple (P) and thread the Finial (V) until tight.

(DO NOT EXCEED THE MAXIMUM WATTAGE RATING)

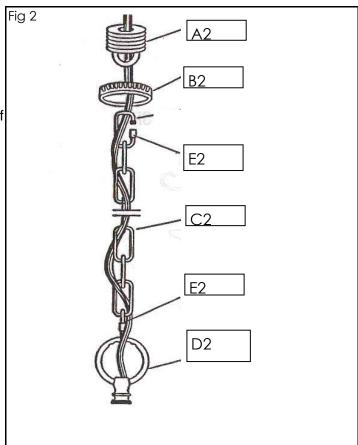

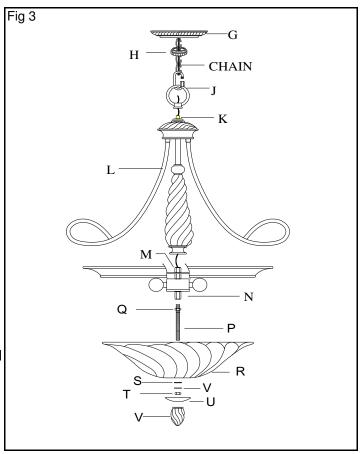



INSTALLATION INSTRUCTIONS

Fixture Name: Torbellino 8106-3P CDB

For Chandelier Light Fixture


WARNING! SHUT OFF POWER AT FUSE OR CIRCUIT BREAKER.


HANGING THE FIXTURE (Fig.1)

- 1. Carefully remove the new fixture from the carton and the yellow bag that holds all parts. Check that all parts are included as shown in the illustration and parts list.
- 2. Shut off the power at the circuit breaker and remove old fixture from ceiling, including the old mounting strap.
- 3. Thread Nipple(C) into Canopy Loop (F) until snug.
- 4. Thread other end of the Nipple (C) with Canopy Loop attached into Mounting Strap (D).
- 5. Place Lock Washer (B) over end of Nipple (C) protruding through Mounting Strap (D) and thread Hex Nuts (A) onto Nipple until tight.
- 6. Take this mounting strap assembly and mount to ceiling junction box with junction box Screws (E). Tighten screw securely with screw driver.
- 7. Unscrew the Canopy loop collar (H) from the Canopy loop. Take the canopy and pass over the Canopy loop. approximatly one half of the canopy loop exterior threads should be exposed. Adjust until desired height is reached. *the Canopy loop collar should fit snugly on the Canopy loop after the canopy is installed. Remove Canopy and Canopy lock collar.
- 8. Assemble the fixture and have an assistant or secure support hold the weight of the fixture while you complete the wiring connections.
- 9. Thread the fixture wires and ground wire of the assembled fixture through the canopy loop and nipple and into the outlet box.

CONNECTING THE WIRES (Fig 2)

- 10. Attach the power supply wires to the fixture lead wires by connecting BLACK to BLACK (or SMOOTH) and WHITE to WHITE (or RIBBED).
- 11. Attach the GROUND wire(GREEN or COPPER) from the Junction Box and the fixture Ground wire to the green Ground Screw on the Mounting Bracket (D) or connect both wires together using the correct size of wire connectors.
- NOTE: Twist the wires together in the same direction you twist the wire connector onto the wires.
- 12. Tuck these wire connections neatly into the Junction Box.
- 13. Raise Canopy (G) to the ceiling and secure in place by tightening the Canopy loop collar(H) into the Canopy Loop(F)
- 14. Install the light bulbs and glass shade as per the fixture assembly sheet.

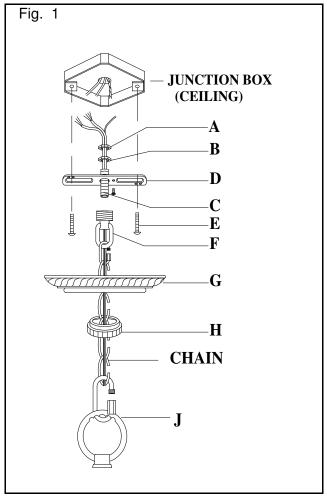

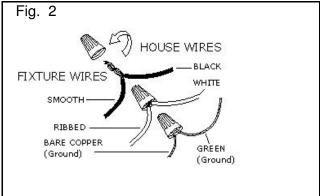

YOUR INSTALLATION IS NOW COMPLETE.
RETURN POWER TO THE JUNCTION BOX
AND TEST THE FIXTURE.

For Customer Service, contact the place of purchase to arrange for replacement parts.